

SDM630MCT-RC

3 Phase Meter + Rogowski Coils



4 DIN MODULES MULTI FUNCTION THREE PHASE ENERGY METER WITH ROGOWSKI COILS

User Manual v1.0

1. Introduction

This document provides operating, maintenance and installation instructions. The SDM630MCT-RC is an innovative instrument for measurement and recording of the electrical parameters. It is particularly suitable for consumption measurement and analysis, with high quality and stability. The meter directly connect with Rogowski coil for current measurement, without integrator. It measures and displays the characteristics of single phase two wires(1p2w), three phase three wires(3p3w) and three phase four wires(3p4w) networks. The measuring parameters include voltage(V), frequency(Hz), current(A), power(kW/Kva/Kvar), import, export and total Energy(kWh/kVarh). The unit can also measure Maximum demand current and power, this is measured over preset periods of up to 60 minutes.

SDM630MCT-RC can communicate through the RS485 serial port by MODBUS RTU protocol. 2 Pulse outputs are provided to count the kWh and kVarh used. Configuration is password protected.

1.1 Unit Characteristics

The Unit can measure and display:

- Voltage and THD% (total harmonic distortion) of all phases
- Line frequency
- Currents, current demand and current THD% of all phases
- Power, maximum power demand and power factor
- Active energy imported and exported
- Reactive energy imported and exported

1.2 Rogowski Coils Primary Current Input

SDM630MCT-RC is operated directly with Rogowski coils without integrator. The ratio of connected Rogowski coils should be standard 85mV/kA. The primary current ranges from 1A to 5000A. The unit has 3 selectable current scales. If the primary current is below 500A, the CT1 (primary) should be set to 0.5kA; if the primary current is 500A to 1000A, the CT1 should be set to 1kA; if the primary current is 1000A to 5000A, the CT1 should be set to 5kA.

1.3 RS485 Modbus RTU

SDM630MCT-RC has a RS485 port with Modbus RTU protocol. RS485 provides a means of remotely monitoring and controlling the unit. Set-up screens are provided for setting up the communication port.

1.4 Pulse output

Two pulse outputs that pulse measured active and reactive energy. The Pulse 2 constant for active energy is 3200imp/kWh. (Terminals 11 & 12) The pulse width for Pulse 1 can be set from the set-up menu (Terminals 9 & 10).

2. Start Up Screens

	The first screen lights up all display segments and can be used as a display check.
	The interface performs a self-test and indicates the result if the test passes.

*After a short delay, the screen will display active energy measurements.

3. Measurements

The buttons operate as follows:

	Selects the Voltage and Current display screens. In Set-up Mode, this is the "Left" or "Back" button.
	Select the Frequency and Power factor display screens. In Set-up Mode, this is the "Up" button.
	Select the Power display screens. In Set-up Mode, this is the "Down" button.
	Select the Energy display screens. In Set-up mode, this is the "Enter" or "Right" button.

3.1 Voltage and Current

Each successive press of the button selects a new parameter:

	Phase to neutral voltages.
	Current on each phase.
	Phase to neutral voltage THD%.
	Current THD% for each phase.

3.2 Frequency and Power Factor and Demand

Each successive press of the button selects a new range:

	Frequency and Power Factor (total).
	Power Factor of each phase.
	Maximum Power Demand.
	Maximum Current Demand.

3.3 Power

Each successive press of the button select a new range:

	Instantaneous Active Power in kW.
	Instantaneous Reactive Power in kVar.
	Instantaneous Volt-Amps in kVA.
	Total kW, kVarh, kVA.

3.4 Energy Measurements

Each successive press of the button selects a new range:

	Import active energy in kWh.
	Export active energy in kWh.
	Import reactive energy in kVarh.
	Export reactive energy in kVarh.
	Total active energy in kWh.
	Total reactive energy in kVarh.

4. Set Up

To enter set-up mode, press the button for 3 seconds, until the password screen appears.

	Setting up is password-protected so you must enter the correct password (default '1000') before processing.
	If an incorrect password is entered, the display will show: PASS Err

To exit setting-up mode, press repeatedly until the measurement screen is restored.

4.1 Set-up Entry Methods

Some menu items, such as password and CT, require a four-digit number entry while others, such as supply system, require selection from a number of menu options.

4.1.1 Menu Option Selection

1. Use the and buttons to scroll through the different options of the set up menu.
2. Press to confirm the selection
3. If an item flashes, then it can be adjusted by the and buttons.
4. Having selected an option from the current layer, press to confirm your selection. The SET indicator will appear.
5. Having completed a parameter setting, press to return to a higher menu level. The SET indicator will be removed and you will be able to use the and buttons for further menu selection.
6. On completion of all setting-up, press repeatedly until the measurement screen is restored.

4.1.2 Number Entry Procedure

When setting up the unit, some screens require the entering of a number. In particular, on entry to the setting up section, a password must be entered. Digits are set individually, from left to right. The procedure is as follows:

1. The current digit to be set flashes and is set using the and buttons
2. Press to confirm each digit setting. The SET indicator appears after the last digit has been set.
3. After setting the last digit, press to exit the number setting routine. The SET indicator will be removed.

4.2 Change Password

	Use the and to choose the change password option.
	Press the to enter the change password routine. The new password screen will appear with the first digit flashing.
	Use and to set the first digit and press to confirm your selection. The next digit will flash.
	Repeat the procedure for the remaining three digits.
	After setting the last digit, SET will show.

Press to exit the number setting routine and return to the Set-up menu. SET will be removed

4.3 DIT Demand Integration Time

This sets the period in minutes over which the current and power readings are integrated for maximum demand measurement. The options are: off, 5, 10, 15, 30, 60 minutes.

	From the set-up menu, use and buttons to select the DIT option. The screen will show the currently selected integration time.
	Press to enter the selection routine. The current time interval will flash.
	Use and buttons to select the time required.
	Press to confirm the selection. SET indicator will appear.

Press to exit the DIT selection routine and return to the menu.

Warnings

Important Safety Information is contained in the Maintenance section. Familiarize yourself with this information before attempting installation or other procedures. Symbols used in this document:

- Risk of Danger: These instructions contain important safety information. Read them before starting installation or servicing of the equipment.
- Caution: Risk of Electric Shock

4.4 Supply System

The unit has a default setting of 3Phase 4wire (3P4). Use this section to set the type of electrical system.

	From the set-up menu, use and buttons to select the system option. The screen will show the currently selected power supply.
	Press to enter the selection routine. The current selection will flash.
	Use and buttons to select the required system option: 1P2(W), 3P3(W), 3P4(W).
	Press to confirm the selection. SET indicator will appear.

Press to exit the system selection routine and return to the menu. SET will disappear and you will be returned to the main set-up Menu.

4.5 CT

The CT option sets the primary current (CT1) of the rogowski coil that wires to the meter. There are 3 selectable current scales: 500A/1000A/5000A.

	From the set-up menu, use and buttons to select the CT option.
	Secondary CT setting Press to enter the CT primary current selection routine.: 0.5kA/1kA/ 5kA
	Press to confirm the selection. SET indicator will appear.

4.6 PT

The PT option sets the secondary voltage (PT2 100 to 500V) of the voltage transformer (PT) that may be connected to the meter.

	Use and buttons to select the PT option. The screen will show the voltage PT secondary voltage value. The default value is 400V.
	Secondary PT setting Press to enter the PT secondary voltage selection routine. The range is from 100 to 500V.
	Set PT ratios value Press to enter the PT ratio screen. The range is from 0001 to 9999.

For example, if set the ratio to be 100, it means the primary voltage equals secondary voltage x100.

4.7 Pulse Output

This option allows you to configure the pulse output. The output can be set to provide a pulse for a defined amount of energy active or reactive. Use this section to set up the relay pulse output—Units: kWh, kVarh

	From the set-up menu, use and buttons to select the Pulse output option.
	Press to enter the selection routine. The unit symbol will flash.
	Use and buttons to choose kWh or kVarh.

On completion of the entry procedure, press to confirm the setting and press to return to the main set up menu.

4.7.1 Pulse rate

Use this to set the energy represented by each pulse.
Rate can be set to 1 pulse per 0.01kWh/0.1kWh/1kWh/10kWh/100kWh.



(It shows 1 impulse = 10kWh/kVArh)



From the set-up menu, use MOD/PPHIZ and P buttons to select the Pulse Rate option.



Press E to enter the selection routine. The current setting will flash. 0.01/0.1/1/10/100kWh/kVArh per pulse.

Use MOD/PPHIZ and P buttons to choose pulse rate.

On completion of the entry procedure, press E to confirm the setting and press V/A ESC to return to the main set up menu.

4.7.2 Pulse Duration

The energy monitored can be active or reactive and the pulse width can be selected as 200, 100 or 60ms.



(It shows pulse width of 200ms)



From the set-up menu, use MOD/PPHIZ and P buttons to select the Pulse width option.



Press E to enter the selection routine. The current setting will flash.

Use MOD/PPHIZ and P buttons to choose pulse width.

On completion of the entry procedure press E to confirm the setting and press V/A ESC to return to the main set up menu.

4.8 Communication

There is a RS485 port can be used for communication using Modbus RTU protocol. For Modbus RTU, parameters are selected from Front panel.

4.8.1 RS485 Address



(The range is from 001 to 247)



From the set-up menu, use MOD/PPHIZ and P buttons to select the address ID.



Press E button to enter the selection routine. The current setting will be flashing.



Use MOD/PPHIZ and P buttons to choose Modbus address (001 to 247).

On completion of the entry procedure, press E button to confirm the setting and press V/A ESC button to return the main set-up menu.

4.8.2 Baud Rate



From the set-up menu, use MOD/PPHIZ and P buttons to select the Baud Rate option.



Press E to enter the selection routine. The current setting will flash.



Use MOD/PPHIZ and P buttons to choose Baud rate 2.4k, 4.8k, 9.6k, 19.2k, 38.4k

On completion of the entry procedure, press E to confirm the setting and press V/A ESC to return to the main set up menu.

4.8.3 Parity



From the set-up menu, use MOD/PPHIZ and P buttons to select the parity option.




Press E to enter the selection routine. The current setting will flash.



Use MOD/PPHIZ and P buttons to choose parity (EVEN / ODD / NONE (default)).

On completion of the entry procedure, press E to confirm the setting and press V/A ESC to return to the main set up menu.

4.8.4 Stop bits

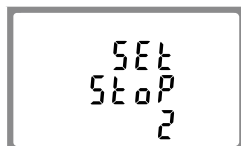

From the set-up menu, use MOD/PPHIZ and P buttons to select the stop bit option.



Press E to enter the selection routine. The current setting will flash.



Use MOD/PPHIZ and P buttons to choose stop bit (2 or 1)
Note: Default is 1, and only when the parity is NONE that the stop bit can be changed to 2.

On completion of the entry procedure, press E to confirm the setting and press V/A ESC to return to the main set up menu.

4.9 Backlit set-up

The meter provides a function to set the blue backlit lasting time(0/5/10/30/60/120 minutes).

Option 0 means the backlit always on here.



Default:60
If it's setted as 5,the backlit will be off in 5minutes.




Use MOD/PPHIZ and P buttons to choose the time

Press E to confirm the setting and press V/A ESC to return to the main set up menu.

4.10 CLR

The meter provides a function to reset the maximum demand value of current and power.

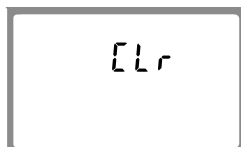

From the set-up menu, use MOD/PPHIZ and P buttons to select the reset option.



Press E to enter the selection routine. The dlt will flash.

Press E to confirm the setting and press V/A ESC to return to the main set up menu.

5.Specifications

5.1 Measured Parameters

The unit can monitor and display the following parameters of a single phase two wire(1p2w), three phase three wire(3p3w) or three phase four wire(3p4w) system.

5.1.1 Voltage and Current

- Phase to neutral voltages 100 to 289V a.c. (not for 3p3w supplies).
- Voltages between phases 173 to 500V a.c. (3p supplies only).
- Percentage total voltage harmonic distortion (THD%) for each phase to N (not for 3p3w supplies).
- Percentage voltage THD% between phases (three phase supplies only).
- Current THD% for each phase

5.1.2 Power factor and Frequency and Max. Demand

- Frequency in Hz
- Instantaneous power:
- Power 0 to 3600 MW
- Reactive power 0 to 3600 MVAR
- Volt-amps 0 to 3600 MVA
- Maximum demanded power since last Demand reset Power factor
- Maximum neutral demand current, since the last Demand reset (for three phase supplies only)

5.1.3 Energy Measurements

- Import/Export active energy 0 to 9999999.9 kWh
- Import/Export reactive energy 0 to 9999999.9 kVArh
- Total active energy 0 to 9999999.9 kWh
- Total reactive energy 0 to 9999999.9 kVArh

5.2 Measured Inputs

Voltage inputs through 4-way fixed connector with 2.5mm² stranded wire capacity. single phase two wire(1p2w), three phase three wire(3p3w) or three phase four wire(3p4w) unbalanced. Line frequency measured from L1 voltage or L3 voltage.

Three current inputs (six physical terminals) with 2.5mm² stranded wire capacity for connection of external Rogowski coils. Nominal rated input current 85mV/kA a.c. Rms.

5.3 Accuracy

- Voltage 0.5% of range maximum
- Current 0.5% of nominal
- Frequency 0.2% of mid-frequency
- Power factor 1% of unity (0.01)
- Active power (W) ±0.5% of range maximum
- Reactive power (VAr) ±1% of range maximum
- Apparent power (VA) ±1% of range maximum
- Active energy (Wh) Class 1 IEC 62053-21
- Reactive energy (VArh) ±1% of range maximum
- Total harmonic distortion 1% up to 31st harmonic
- Response time to step input 1s, typical, to >99% of final reading, at 50 Hz.

5.4 Auxiliary Supply

Two-way fixed connector with 2.5mm² stranded wire capacity. 85 to 275V a.c. 50/60Hz ±10% or 120V to 380V d.c. ±20%. Consumption < 10W.

5.5 Interfaces for External Monitoring

Three interfaces are provided:

- RS485 communication channel that can be programmed for Modbus RTU protocol
- Relay output indicating real-time measured energy. (configurable)
- Pulse output 3200imp/kWh (not configurable)

The Modbus configuration (baud rate etc.) and the pulse relay output assignments (kW/kVArh, import/export etc.) are configured through the set-up screens.

5.5.1 Pulse Output

The pulse output can be set to generate pulses to represent kWh or kVArh.

Rate can be set to generate 1 pulse per:

- 0.01 = 10 Wh/VArh
- 0.1 = 100 Wh/VArh
- 1 = 1 kWh/kVArh
- 10 = 10 kWh/kVArh
- 100 = 100 kWh/kVArh
- 1000 = 1000 kWh/kVArh

Pulse width 200/100/60 ms.

5.5.2 RS485 Output for Modbus RTU

For Modbus RTU, the following RS485 communication parameters can be configured from the set-up menu:

- Baud rate 2400, 4800, 9600, 19200, 38400
- Parity none (default) / odd / even
- Stop bits 1 or 2
- RS485 network address nnn – 3-digit number, 1 to 247

Modbus™ Word order Hi/Lo byte order is set automatically to normal or reverse. It cannot be configured from the set-up menu.

5.6 Reference Conditions of Influence Quantities

Influence Quantities are variables that affect measurement errors to a minor degree. Accuracy is verified under nominal value (within the specified tolerance) of these conditions.

- Ambient temperature 23°C ±1°C
- Input frequency 50 or 60Hz ±2%
- Input waveform Sinusoidal (distortion factor < 0.005)
- Auxiliary supply voltage Nominal ±1%
- Auxiliary supply frequency Nominal ±1%
- Auxiliary supply waveform (if AC) Sinusoidal (distortion factor < 0.05)
- Magnetic field of external origin Terrestrial flux

5.7 Environment


- Operating temperature -25°C to +55°C*
- Storage temperature -40°C to +70°C*
- Relative humidity 0 to 95%, non-condensing
- Altitude Up to 3000m
- Warm up time 1 minute
- Vibration 10Hz to 50Hz, IEC 60068-2-6, 2g
- Shock 30g in 3 planes

* Maximum operating and storage temperatures are in the context of typical daily and seasonal variation.

5.8 Mechanics

- DIN rail dimensions 72 x 94.5 mm (WxH) per DIN 43880
- Mounting DIN rail (DIN 43880)
- Sealing IP51 (indoor)
- Material Self-extinguishing UI94 V-0





6.Dimensions

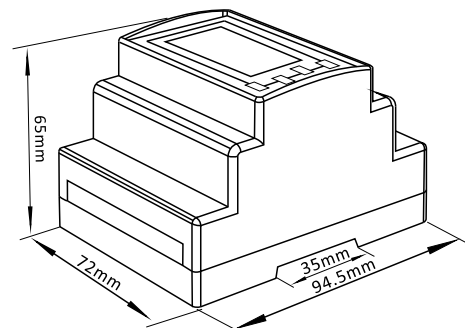

7.Installation

For the wiring diagram of SDM630MCT-RC, different networks have different diagrams. Below are wire diagrams for 1 phase 2 wires, 3 phase 3 wires, 3 phase 4 wires.

 Current and Voltage inputs

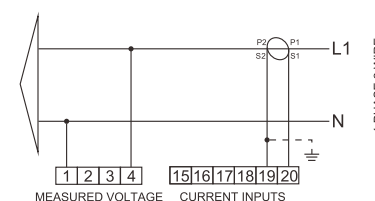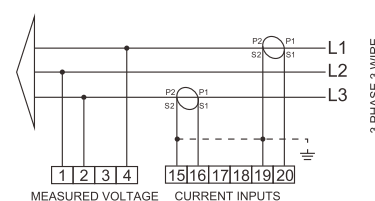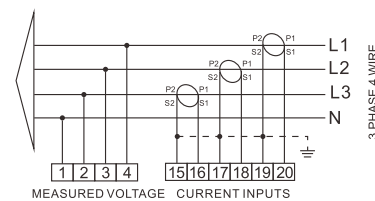

8.Rogowski Coil




8.1 Model Table

Coil code	Reference Rated Current	Class	Window Size (mm)	Coil Length (mm)
ESCT-RC60	500A	0.5	50	200
ESCT-RC100	1000A	0.5	100	395
ESCT-RC150	5000A	0.5	150	525

8.2 Dimensions

Dimensions tolerance
A,B,C,F: ±5mm, D: ±0.2mm, E: ±10mm

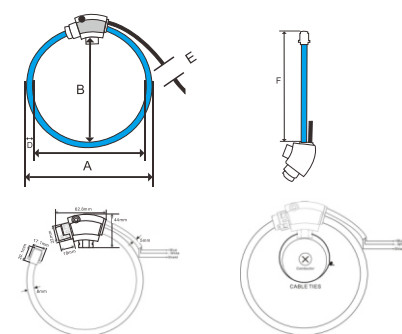

Item:	RC60	RC100	RC150
A.Windows Size A	60	135	165
B.Windows Size B	50	100	150
C.Coil O.D.	66	151	181
D.Coil Section	8		
E.Lead Cable Total Length	2000		
F.Coil Length	200	395	525

Zhejiang Eastron Electronic Co., Ltd.
No. 1369, Chengnan Rd.
Jiaxing, Zhejiang, CHINA
Tel:86 573 83698881/83698882
Tel:86 573 83698883
Email :sales@eastrongroup.com
Web :www.eastrongroup.com

