


**FAP2001, FAP2001-xxx, FAP2002, FAP2002-xxx,
FAP3002, FAP3002-xxx, FAP3011, FAP3011-xxx**

FI	Asennusohje
SE	Installationsanvisning
NO	Installasjonsanvisning
EN	Installation instruction
LV	Uzstādīšanas instrukcija
LT	Instaliavimoinstrukcija
RU	Руководство по монтажу
PL	Instrukcja instalacji
EE	Paigaldusjuhend

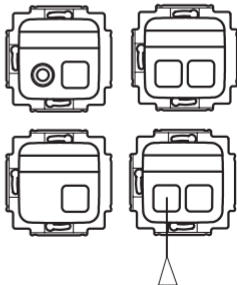

Käyttöjännite; Driftsspänning; Driftspenning;
Operating voltage; Darba spriegums; Darbiné
ĩtampa; Рабочее напряжение; Narięcie pracy;
Toitepinge

9,5 - 28 Vac /
9,5 - 35 Vdc

Virrankulutus; Strömförbrukning; Strømforbruk;
Current consumption; Strāvas patēriņš; Srovés
sānaudos; Потребляемый ток; Pobrń prādu;
Voolutarve

20 mA ac / 10 mA dc

Kytkimen kuormitettavuus; Kontaktbelastning;
Maks bryterbelastning; Contact rating; Kontaktu
vērtējums; Nominali ģtampa kontaktiniuose
tařkuose; Макс. нагрузка на контакт; Dane
styku; Lūliti koormatavus





100 mA
30 Vac / 30 Vdc
3 VA / W

Kotelointiluokka; Kapslingsklass; Tettethetsklasse;
Protection class; Aizsardzības klase; Saugumo
klasė; Класс защиты; Stopień ochrony;
Kaitseaste

IP20

Käyttölämpötila; Drifttemperatur
Drifttemperatur; Operating temperature; Darba
temperatūra; Darbiné temperatūra; Диапазон
рабочих температур; Temperatura pracy;
Kasutustemperatuur

  5 °C - 40 °C

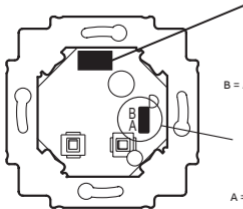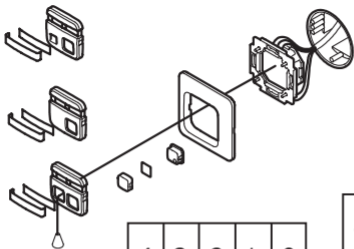


FAP2002

B = ADRESSED




A = NORMAL

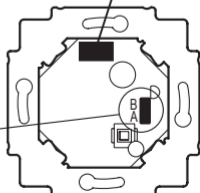


FAP2001 & FAP3002

 
FAP2001




FAP2002

 

FAP3002

 

FAP3011

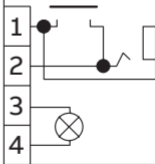

—
ABB Oy

Porvoon Sisäkehä 2, PO Box 16
FI-06101 Porvoo, Finland
Phone: +358 10 22 11

abb.fi/asennustuotteet
installationmaterials.com



CT11.080/Doc.: 410946E