



Futurehome Smart Thermostat PR
User Manual – EN

Description of screen indicators

- a. Zigbee icon. The Zigbee icon will flash when the thermostat searches for networks and lights up when connected.
- b. Time. This is set automatically after a short time when connected to the Futurehome Smarthub.
- c. Home and Away mode.
- d. Heating on / off indicator. If the thermostat heats the floor, the lines will move to the right. If maximum guard is used the lines flash if the temperature limit is exceeded.
- e. Indicator flashes when open window is detected.
- f. Manual / Auto indicator.
- g. Indicates that the temperature is set.
- h. Indicator for active child lock / button lock.

- On/Off button
- Inc. temp
- Lower temp
- Mode button

Advanced settings

When the thermostat is on, press and hold ‘+’ and ‘-’ (5s) simultaneously to open advanced settings.

1. Sensor type
 - 00: Air sensor / Internal 01: Floor sensor / External
 - 02: Max guard / regulator on air temperature and limiter with floor sensor
 2. Floor sensor type / External:
 - 0: 10 kOhm | 1: 12 kOhm | 2: 15 kOhm | 3: 47 kOhm
 3. Max Guarding Temperature :This must be set in the thermostat. 20–95° C, Standard is 27° C, ‘-’ No limit.
 4. Turn: 1–9° C, Standard is 2° C
 5. Calibration: –9to +9° C, Standard is 0° C
 6. Highest set point: 35–90° C, Standard is 35° C
 7. Lowest setpoint: 0–30° C, Standard is 5° C
 8. Home mode setpoint: The standard is 22° C
 9. Setpoint for away mode: The default is 15° C
 10. Brightness in sleep mode: 1–10, default is 1
 11. Open window detection: 0 =Disabled / 1 =Active
 12. Restart the system:
 - Press +or –to change ‘-’ to ‘=’and waitfor 5s
 13. Reset to factory settings
 - Press +or –to change ‘-’ to ‘=’and waitfor 5s
- You can change settings with ‘+’ or ‘-’
 - Press ‘:’ to select the settings and proceed.
 - To save the changes and exit advanced settings, press ‘⏪’.

Functions

Button	Short press	Long press
	Confirm/go back	Turn ON/OFF
	Temperature increase	Enter menu
	Temperature decrease	Start ZigBee pairing
	Change between home and away mode	Display date in MM/DD format
Long press ‘⏪’ and : Change between air and floor sensor (air and floor mode)		
Long press ‘+’ and : Open advanced settings		
Long press ‘-’ and : Lock/Unlock		

To control the thermostat remotely it must be added to a ZigBee gateway

1. Start the process of adding new devices to your ZigBee gateway and follow the instructions.
2. To put the thermostat in pairing mode: Long press ‘-’ until the ZigBee icon flashes
3. Continue the process of adding new devices to the app.

Electrical data

- Power: 230V / 50Hz
- Circuit breaker: Max 16A
- Maximum load: 3600W
- 1-pole electronic relay
- Internal power supply with galvanic isolation
- Do not use self-regulating heating cable
- Do not use for contactor control

Futurehome AS
P.O Box 72, 0801, Oslo, Norway