

Part no. PKE-SWD-SP
Article no. 150614

Program

Description			Fitted on PKE motor protective circuit breaker Messages: - Switch position PKE - Motor current in % - Thermal motor image in % - Trip-indicating auxiliary contact (Overload, Short-circuit,...) - Set value of overload releases - Set time lag (CLASS) - Type of trip block Commands: Remote disconnection of motor protective circuit breaker
For use with			PKE12 PKE32 PKE65


Approbationen

NA Certification

Request filed for UL and CSA

Part no.			PKE-SWD-SP
----------	--	--	------------

Dimensions

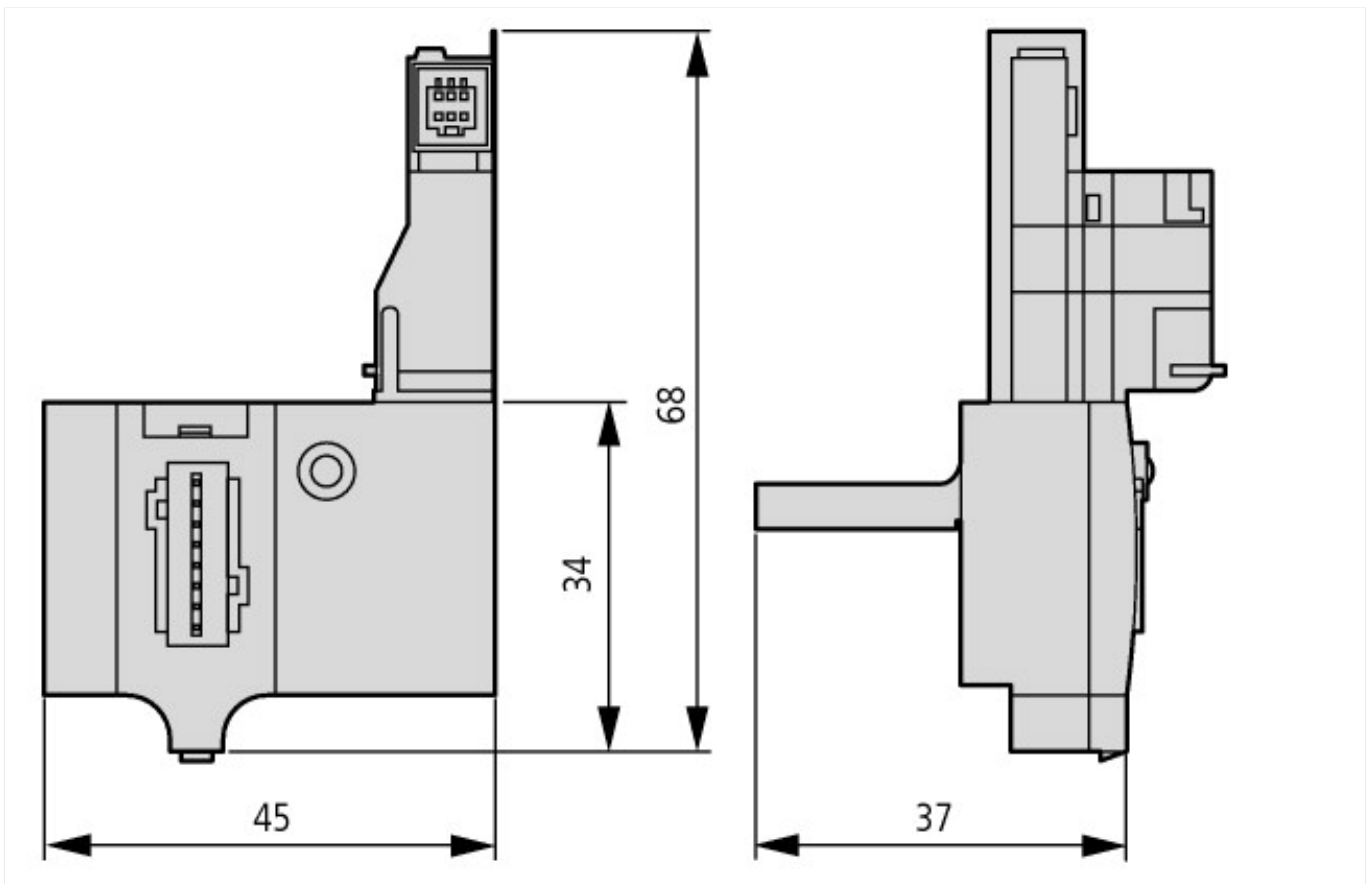

Additional product information (links)

IL03407192Z	ftp://ftp.moeller.net/DOCUMENTATION/AWA_INSTRUCTIONS/IL03407192Z2011_05.pdf
MN05006001Z (AWB2723-1613), SWD station - italiano	ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN05006001Z_IT.pdf
MN05006001Z (AWB2723-1613), SWD station - English	ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN05006001Z_EN.pdf
MN05006001Z (AWB2723-1613), SWD station - Deutsch	ftp://ftp.moeller.net/DOCUMENTATION/AWB_MANUALS/MN05006001Z_DE.pdf