





## Mill Invisible & Glass panel heater illustrations

### 1. DESCRIPTION OF THE HEATER

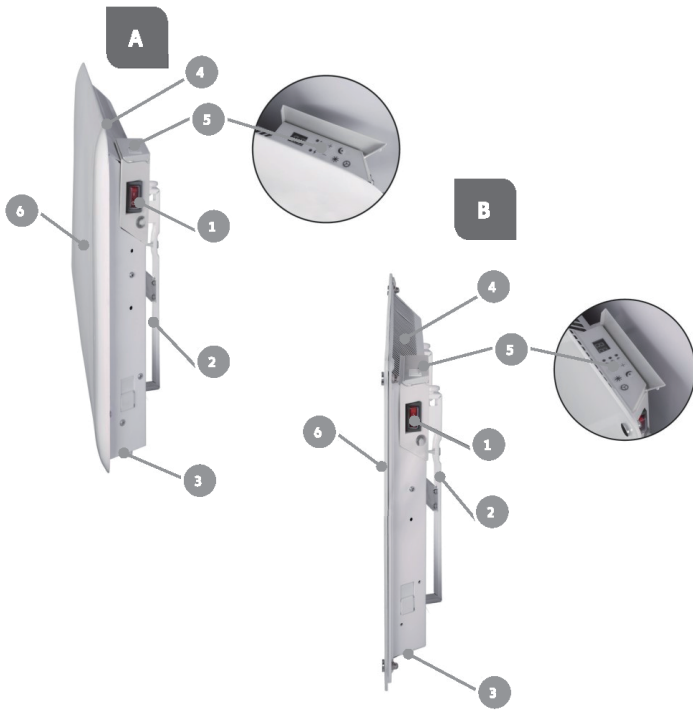


### 2. ASSEMBLY

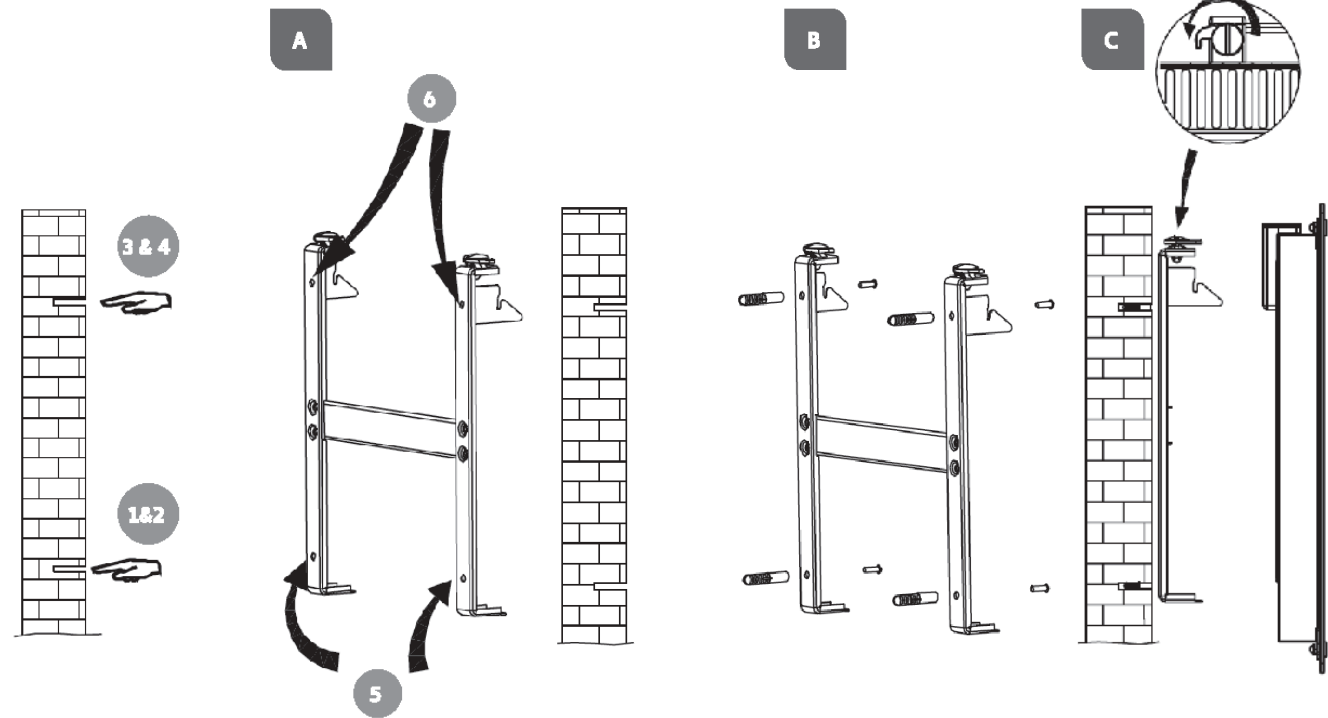


### 3. TEMPERATURE CALIBRATION




### 4. RESETTING THE HEATER

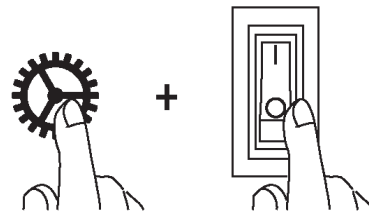

### 5. CONTROL PANEL ELECTRONIC THERMOSTAT

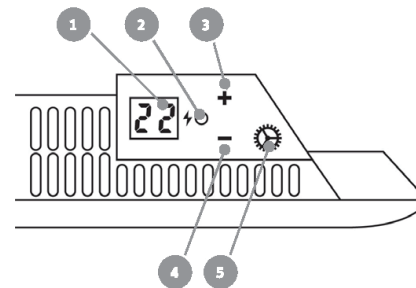


### 6. POWER INDICATOR ELECTRONIC THERMOSTAT

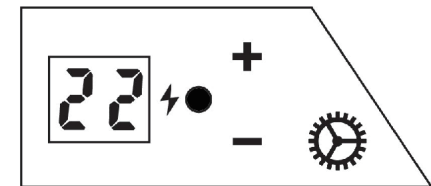


7. SET DESIRED TEMPERATURE




8. CONTROL PANEL DAY/NIGHT THERMOSTAT

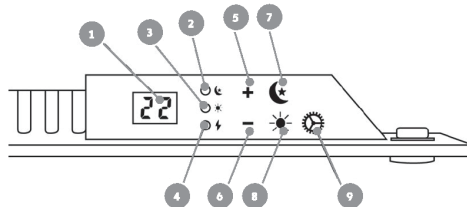

 
9. POWER INDICATOR DAY/NIGHT THERMOSTAT




10. HOW TO ACTIVATE DAYTIME SETBACK

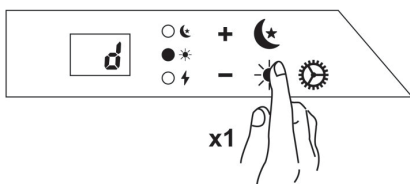


11. HOW TO ACTIVATE NIGHTTIME SETBACK

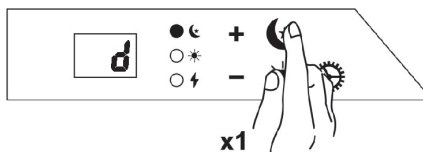

 12. CHANGE SETBACK TEMPERATURE — DAYTIME



 13. CHANGE SETBACK TEMPERATURE — NIGHTTIME





14. CHANGE NUMBER OF HOURS — DAYTIME



15. CHANGE NUMBER OF HOURS — NIGHTTIME



  16. CANCEL (SKIP) SETBACK PERIOD



17. DELETE A SETBACK PROGRAM



18. HOW TO ACTIVATE ADVANCED MODE

