


# RADIM RF SWITCH

220-240VAC 50/60Hz 1x(120-288)W IP20

## INTRODUCTION

**IMPORTANT:** Read all the instructions prior to installation

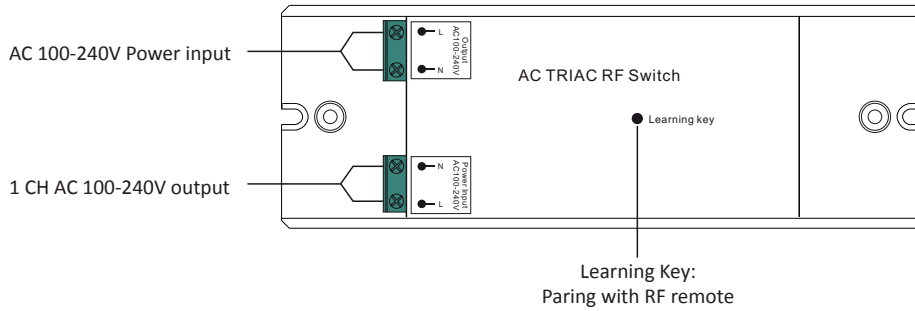

## SAFETY AND WARNINGS

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

## PRODUCT DATA

Input Voltage	100-240VAC
Output Voltage	1x(100-240)VAC
Output Current	1x1.2A
Output Power	1 x (120-288)W
Measurements	170 x 59 x 29 mm

- Radio Frequency: 868/869.5/916.5/434mhz
- Protection class: IP20
- Great compatibility with a variety of remote controls
- To switch on/off single colour LED lamps, traditional incandescent and halogen lights

## INSTALLATION

Do wiring according to the connection diagram.

### Pair RF Receiver with RF remote:



1. Connect and wire up the RF receiver correctly.
  2. Turn on the power and remote.
  3. Click the "Learning" key button on receiver.
  - 4a. Immediately click zone number.
  - 4b. Touch the colour wheel on remote.
- The connected LED light on the receiver will flicker twice, indicating a successful pairing.

**Note:** One receiver can be paired with max. 8 remote controls.

### Delete the pairing:


1. Wire up the RF receiver correctly, and turn power on.
2. Hold down the "Learning" key button on the receiver for 4 seconds until the connected LED light on the receiver flickers twice, indicating it is deleted.

## WIRING DIAGRAM

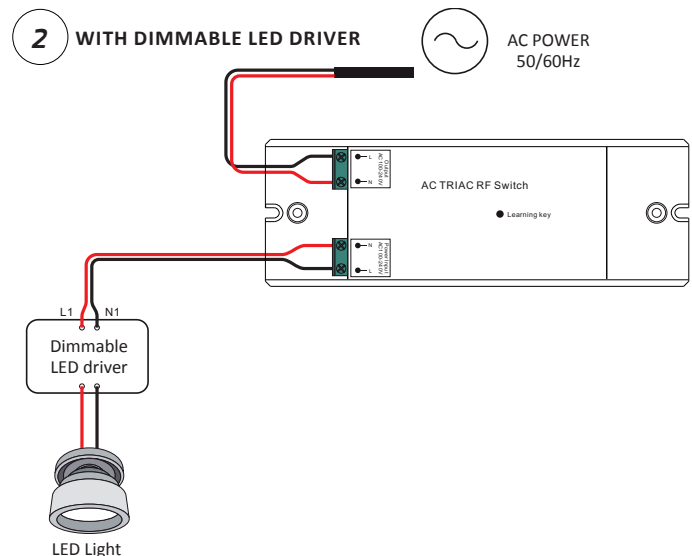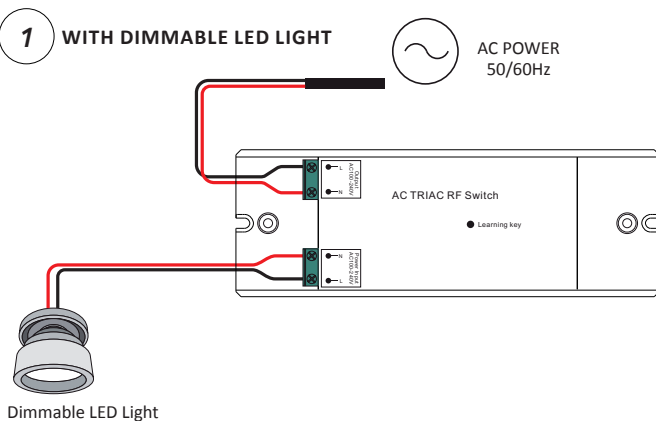


**If you use multiple receivers, you have two choices:**

 Option 1: Have all the receivers in the same zone, like zone 1



Option 2: Have each receiver in a different zone, like zone 1, 2 or 3

 


# RADIM RF SWITCH

220-240VAC 50/60Hz 1x(120-288)W IP20

## INTRODUCTION

**IMPORTANT:** Read all the instructions prior to installation

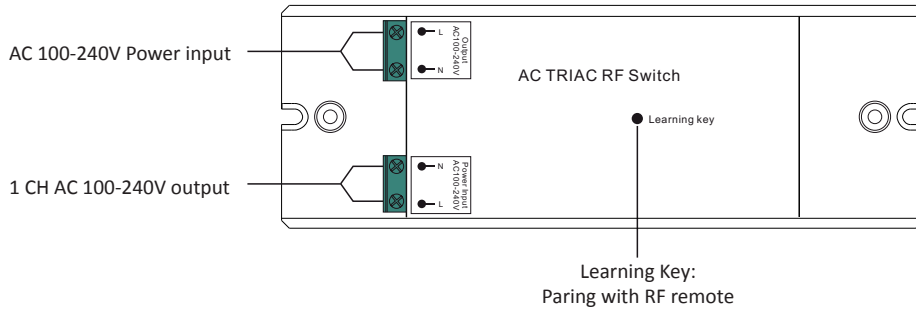

## SAFETY AND WARNINGS

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

## PRODUCT DATA

Input Voltage	100-240VAC
Output Voltage	1x(100-240)VAC
Output Current	1x1.2A
Output Power	1 x (120-288)W
Measurements	170 x 59 x 29 mm

- Radio Frequency: 868/869.5/916.5/434mhz
- Protection class: IP20
- Great compatibility with a variety of remote controls
- To switch on/off single colour LED lamps, traditional incandescent and halogen lights

## INSTALLATION

Do wiring according to the connection diagram.

### Pair RF Receiver with RF remote:



1. Connect and wire up the RF receiver correctly.
  2. Turn on the power and remote.
  3. Click the "Learning" key button on receiver.
  - 4a. Immediately click zone number.
  - 4b. Touch the colour wheel on remote.
- The connected LED light on the receiver will flicker twice, indicating a successful pairing.

**Note:** One receiver can be paired with max 8 remote controls.

### Delete the pairing:


1. Wire up the RF receiver correctly, and turn power on.
2. Hold down the "Learning" key button on the receiver for 3 seconds until the connected LED light on the receiver flickers twice, indicating it is deleted.

## WIRING DIAGRAM

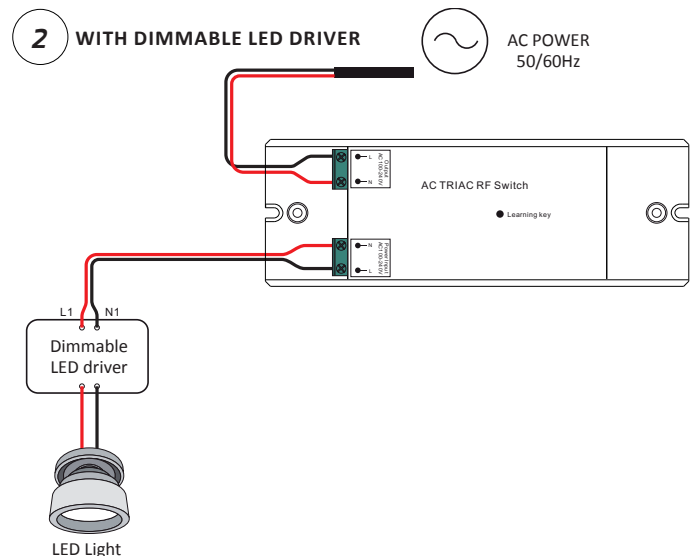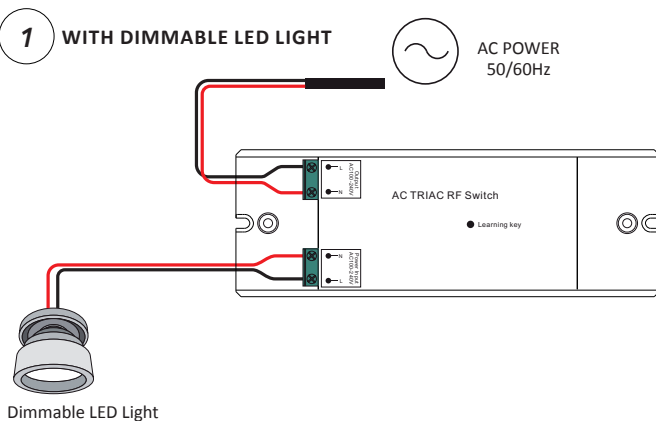

### If you use multiple receivers, you have two choices:

 Option 1: have all the receivers in the same zone, like zone 1



Option 2: have each receiver in a different zone, like zone 1, 2 or 3

