

RADIM REMOTE 5 ZONES

CE RoHS 220-240VAC 50/60Hz IP20



INSTALLATION

Do wiring according to the connection diagram.

Pair with RF receivers:

1. Turn on RF remote

- 2. Click the "Learning" key button on RF receiver.
- 2. Click any button on the remote.

The connected led light on receiver will flicker once, meaning well paired.

If you use multiple receivers, you have two choices:



How to delete the pairing:

Press and hold down "Learning" key on the receiver for 4 seconds until connected LED lights flicker twice, indicating it is deleted.