
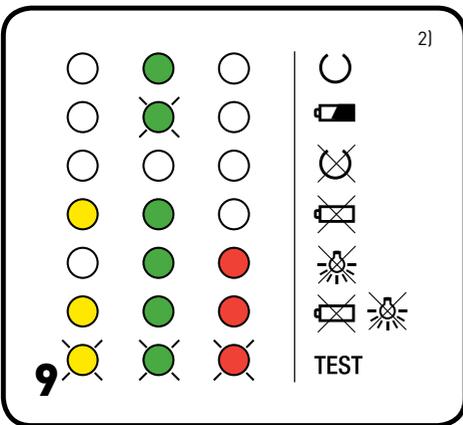
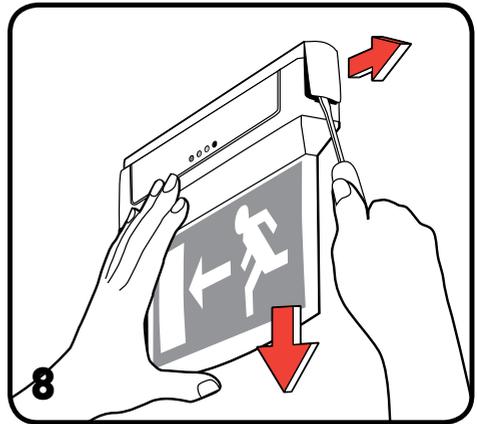
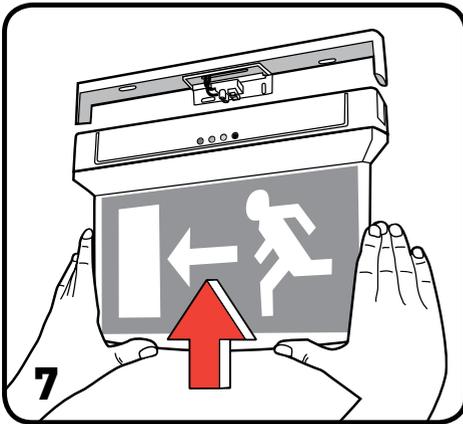
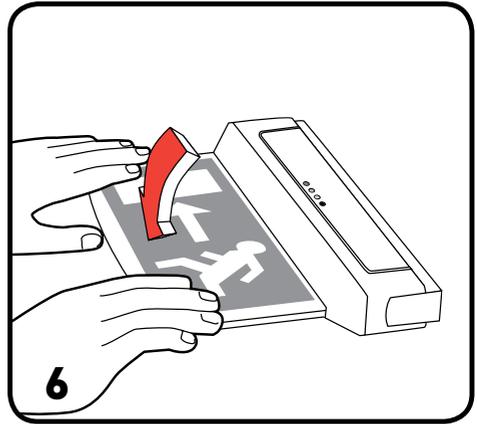


1)

**1) Important notice!**

When the mains are cut off for more than 24h, **disconnect the battery!**  
*Not applicable for centralized versions!*

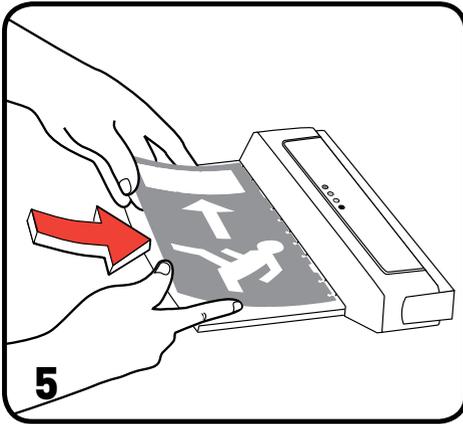

### Functional Test

#### Manually

The test is activated by pressing the test-button for 0.1-2 seconds.

#### Automatically

The test starts automatically once per week and lasts for 10 minutes.

### Duration Test

#### Manually

The test is activated by pressing the test-button for 5-10 seconds.

#### Automatically

The test starts automatically once per every 3 months and lasts for 1-3 hours.

### 2) Important notice!

Automatic test of two luminaries in the same area may occur, but this is very unlikely!  
*Not applicable for centralized versions!*