
BACK


WOLF APEX BT Color Kit - how to change the color kit




7. Open the boom mic flap

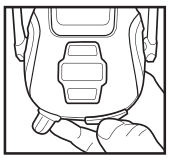


8. Detach the existing cover with your fingernail by pushing the slot outwards and upwards.

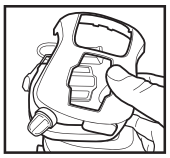


9. Remove the existing cover

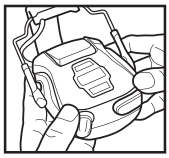

10. Assemble the new cover from the bottom of the headset by passing the mic-in jack cover and knob through the holes.

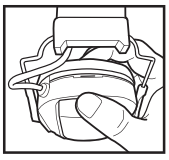


11. Align the new cover & push the upper part into the slot until you hear a clicking sound.

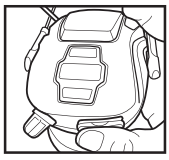

12. Close the boom mic flap


WOLF APEX BT Color Kit - how to change the color kit

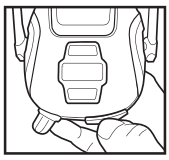


7. Open the boom mic flap




8. Detach the existing cover with your fingernail by pushing the slot outwards and upwards.

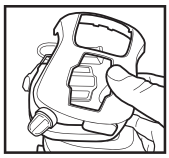


9. Remove the existing cover

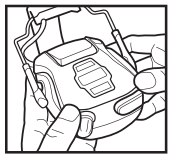

10. Assemble the new cover from the bottom of the headset by passing the mic-in jack cover and knob through the holes.

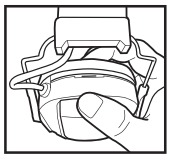


11. Align the new cover & push the upper part into the slot until you hear a clicking sound.

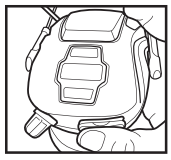

12. Close the boom mic flap


WOLF APEX BT Color Kit - how to change the color kit

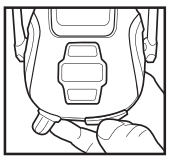


7. Open the boom mic flap




8. Detach the existing cover with your fingernail by pushing the slot outwards and upwards.

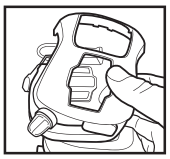


9. Remove the existing cover

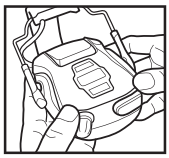

10. Assemble the new cover from the bottom of the headset by passing the mic-in jack cover and knob through the holes.

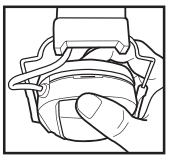


11. Align the new cover & push the upper part into the slot until you hear a clicking sound.

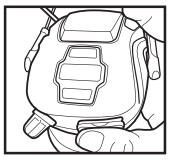

12. Close the boom mic flap


WOLF APEX BT Color Kit - how to change the color kit

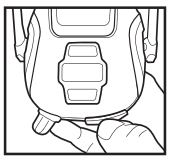


7. Open the boom mic flap




8. Detach the existing cover with your fingernail by pushing the slot outwards and upwards.

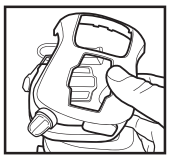


9. Remove the existing cover

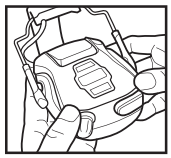

10. Assemble the new cover from the bottom of the headset by passing the mic-in jack cover and knob through the holes.

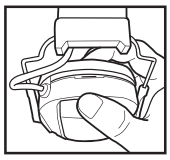


11. Align the new cover & push the upper part into the slot until you hear a clicking sound.

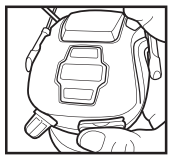


12. Close the boom mic flap

FRONT


WOLF APEX BT Color Kit - how to change the color kit

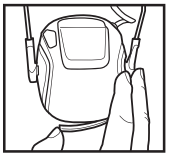


1. Open the battery flap

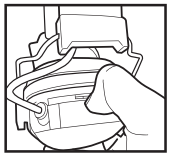


2. Detach the existing cover with your fingernail by pushing the slot outwards and upwards.

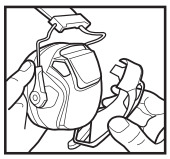


3. Remove the existing cover

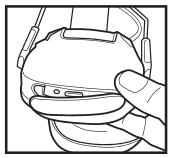

4. Assemble the new cover from the bottom of the headset by passing the battery flap through the hole.

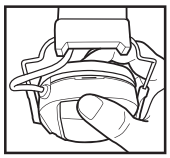


5. Align the new cover & push the upper part into the slot until you hear a clicking sound.

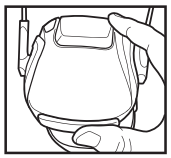


6. Close the battery flap


WOLF APEX BT Color Kit - how to change the color kit

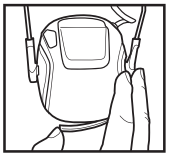


1. Open the battery flap

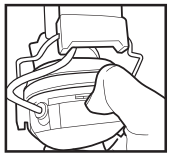


2. Detach the existing cover with your fingernail by pushing the slot outwards and upwards.

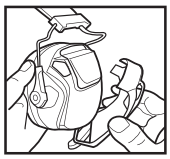


3. Remove the existing cover

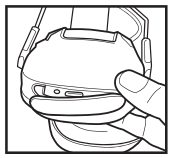

4. Assemble the new cover from the bottom of the headset by passing the battery flap through the hole.

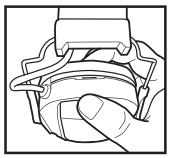


5. Align the new cover & push the upper part into the slot until you hear a clicking sound.

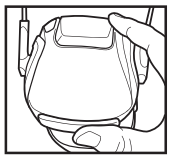


6. Close the battery flap

WOLF APEX BT Color Kit - how to change the color kit

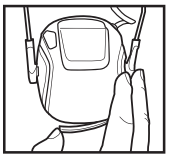


1. Open the battery flap

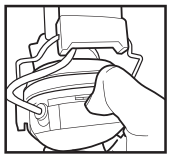


2. Detach the existing cover with your fingernail by pushing the slot outwards and upwards.




3. Remove the existing cover

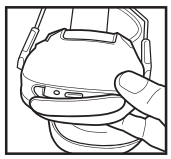

4. Assemble the new cover from the bottom of the headset by passing the battery flap through the hole.

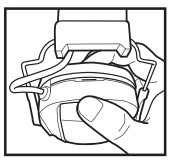


5. Align the new cover & push the upper part into the slot until you hear a clicking sound.

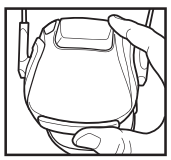


6. Close the battery flap

WOLF APEX BT Color Kit - how to change the color kit

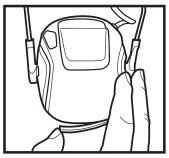


1. Open the battery flap

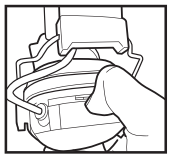


2. Detach the existing cover with your fingernail by pushing the slot outwards and upwards.




3. Remove the existing cover

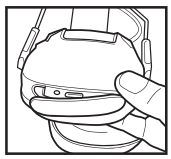

4. Assemble the new cover from the bottom of the headset by passing the battery flap through the hole.

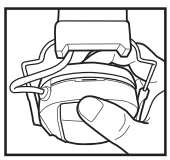

5. Align the new cover & push the upper part into the slot until you hear a clicking sound.

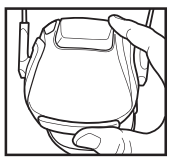

6. Close the battery flap